 



INSTALLATION INSTRUCTION




DLP LED Downlight

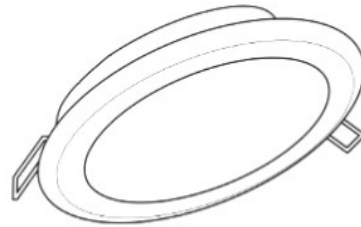


Important

- 1.The following contains important information and should be read carefully prior to installation.
- 2.Luminaire to be installed by qualified persons only.
- 3.For indoor and covered area application only (out of weather were humidity is less than 85% not condensing and temperature will not fall below 5 C).
- 4.Ensure mains supply is disconnected prior to any maintenance or installation work.

1. Power off

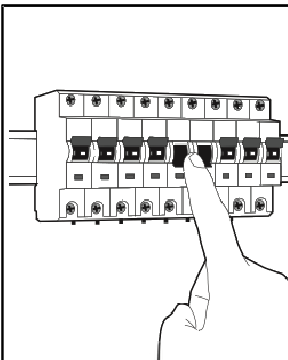


2. Cut out ceiling hole as per table

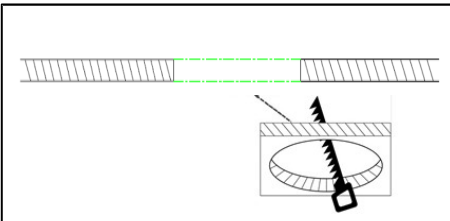


Model	Cut-out(mm)
DLP4XXW	108
DLP6XXW	158
DLP8XXW	208

XX- Power

3. Connect supply to driver

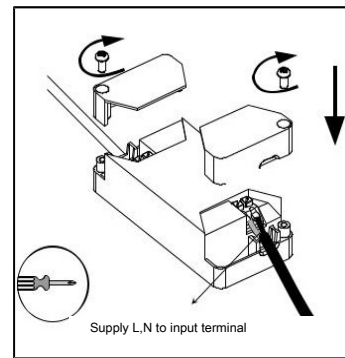

4. Affix downlight into cut-out hole

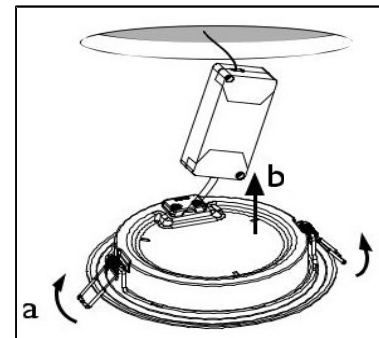

5. Switch on main supply after installed

Warning

Maximum loading of earth leakage and circuit protection devices

Note:

• The maximum number of ballasts connected to earth leakage circuit protection devices shall not be greater than 40 units for fixed output and 32 units all others or "that as recommended by the protective device supplier/manufacturer whichever is the smaller number".

• The maximum loading of automatic circuit breakers shall not be greater than those shown in the table supplied by the ballast manufacturer or "that as recommended by the protective device supplier/manufacturer whichever is the smaller number".