


DAVIS LIGHTING

Installation Instruction



BRIXIA SERIES

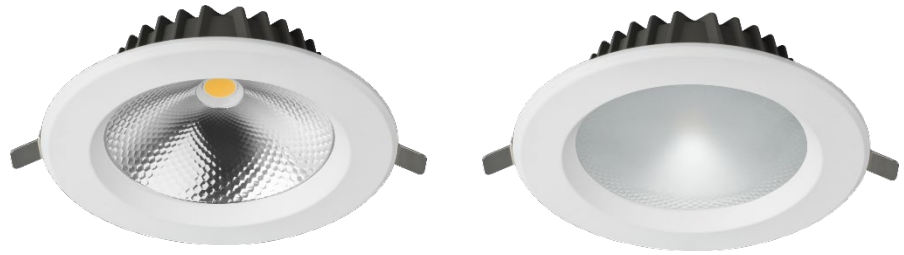

- Read all instructions to prevent injury, electric shock or damage due to fire or mechanical hazards.
- See product label for supply specifications.

Storage:

Prior to installation products are to be stored in cool and dry conditions.


Application:

The installation application and orientation of the product is designed in accordance with the nominated product IP rating, class designation. Installation environments outside these conditions are not recommended. The product is designed to be installed in the horizontal orientation only.

Cautions:

- Electronic control equipment must not be subjected to high voltages, DO NOT MEGGER between Live and Neutral.
- All cable/conduit terminations must be installed in accordance with the designated IP rating of this product.
- Suitable installation fastening methods should be employed to ensure the mounting points are not damaged when subjected to vibration and or movement.
- This light source of this luminaire is not replaceable. When the light source reaches it end of life, the whole luminaire shall be replaced.

Dimensions:

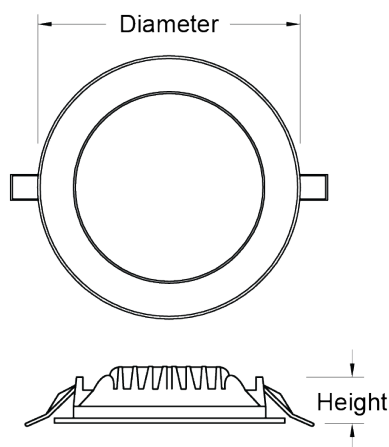


Model	Diameter Ø (mm)	Height (mm)	Cut Out Ø (mm)
BR308WxK	90	45	70
BR410WxK BR412WxK	120	43	100
BR612WxK BR615WxK BR620WxK	165	55	140
BR820WxK BR825WxK BR830WxK BR840WxK	220	60	200


"x" denotes CCT, 3 = 3000K ; 4 = 4000K ; 6 = 6000K

Installation:


1. Turn OFF the main supply.

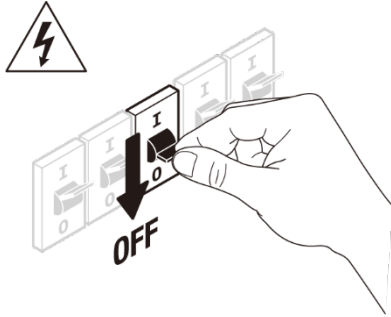


2. Cut out ceiling hole as per dimension given.

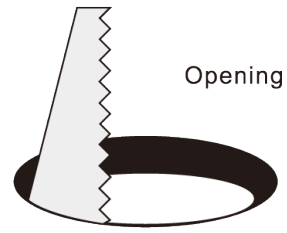


3. Connect the DC cable from driver to downlight then connect mains supply.

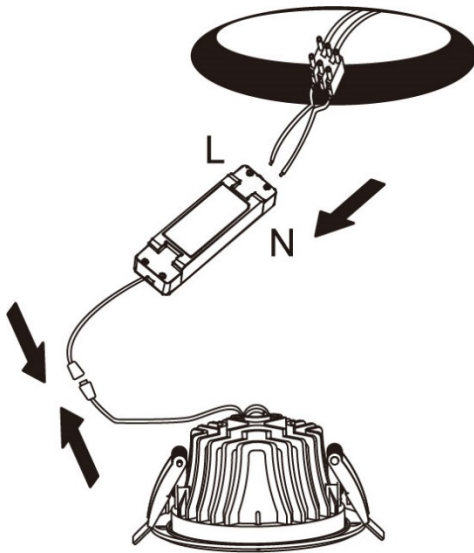


4. Fold up springs and fix downlight into cut out hole.

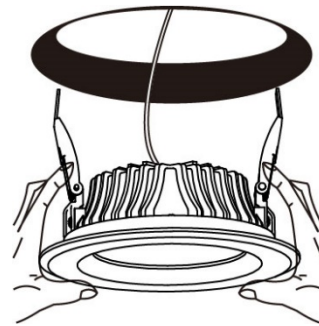

5. Turn ON the main supply.

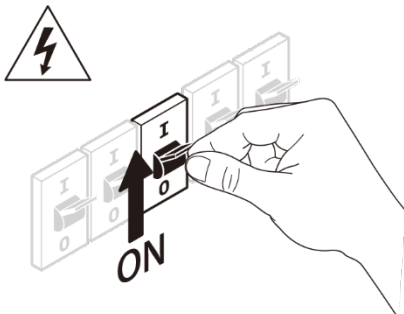

6. Downlight should lit when it is turned ON.

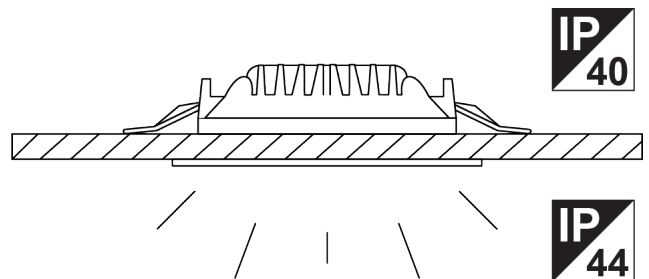

IP40
IP44

