Floryn - FLX

Floodlight

Installation Instructions

This installation guide is valid for the following models:

FLX







FLX30/60/100

FLX120/150

FLX200/250/280/300/400

PRIOR TO INSTALLATION



- Read all instructions to prevent injury, electric shock or damage due to fire or mechanical hazards
- See product label for supply specifications



Inspect the luminaire and associated parts for any signs of defect, in particular fasteners, cables and the diffuser or glass lens

DO NOT INSTALL THE LUMINAIRE IF IT APPEARS IN ANY WAY FAULTY

Consult with the supplier / sales office for details regarding replacement





CAUTION




 
- Before commencing installation, turn off and isolate the electrical supply
- Electronic control equipment must not be subjected to high voltages. DO NOT MEGGER between Live and Neutral
- All cable / conduit terminations must be installed in accordance with the designated IP rating
 of this product
- Suitable installation fastening methods should be employed to ensure the mounting points are not damaged when subjected to vibration and / or movement
- This luminaire must be installed by qualified electrician in accordance with local rules and codes
- This luminaire cannot be disassembled by non-professional persons
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person
- Prior to installation, products are to be stored in cool dry conditions
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard
- Terminal block used must comply to IEC60998-1, IEC60998-2-1, Screw type, 3 poles, 450v, T110, 6mm²


INSTALLATION

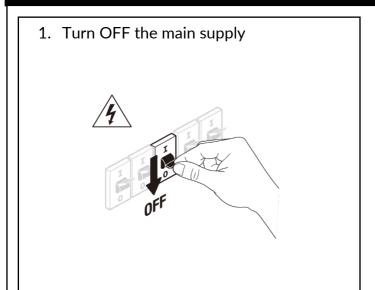

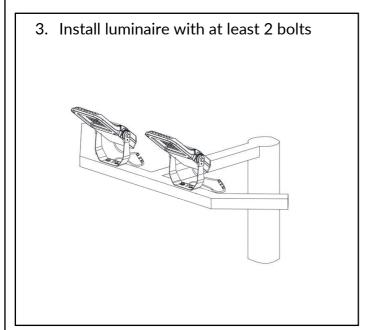

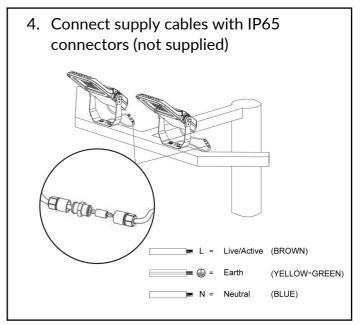



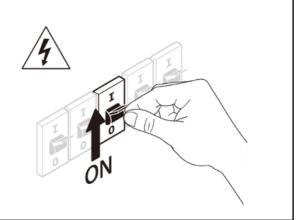





Unauthorized modification & improper installation void product warranty.

DIMENSIONS

  FLX

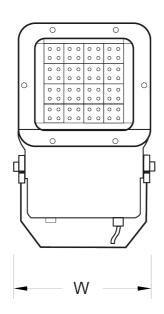



Model	Dimension (LxWxT)
FLX30/60/100	525 x 270 x 86.5
FLX120/150	590 x 370 x 87.5
FLX200/250/280/300/400	695 x 450 x 97

MAINTENANCE

The supply must be isolated before opening or accessing the luminaire. Product maintenance is critical to the products designed performance. Davis Lighting is not responsible for any product not maintained in accordance with the recommended procedure or intervals. It is recommended that a bi-annual cleaning cycle is implemented. Inspect optical surfaces for damage or crack. Products supplied with visors or covers must not be operate with a damaged visor or cover; it is recommended damaged visors or covers be replaced by a competent person immediately. Seals and electrical components such as wirings to be checked for deterioration.





All photometric and electrical data published are of $\pm 10\%$ tolerance. Characteristics and specifications may change without notice. All electrical installations / connections should be carried out by a suitably qualified person. Application images are indicative only and may not contain actual Davis product. The information contained in this publication is typical and must not be interpreted as a guarantee of individual product performance.



This product may contain substances that can be hazardous to the environment if not disposed of correctly. Electrical and electronic equipment should never be discarded along with general waste but should be separated for correct treatment and recovery. Packaging and waste materials should be recycled wherever possible.

CONTACT

Australia Head Office & Sales

Davex Australia Pty Ltd Head Office: +61 (7) 3712 8988 Sales Offices: 1300 851 001 Fax: +61 (7) 3272 8988

Email: australia@davislighting.com

Malaysia Head Office & Sales

Davex Malaysia Sdn Bhd (114942-X) Phone: +60 (3) 5636 4348 Fax: +60 (3) 5636 4352

Email: malaysia@davislighting.com

Singapore Head Office & Sales

Davex Singapore Pte Ltd Phone: +65 6745 2511 Fax: +65 6745 5828

Email: singapore@davislighting.com

davislighting.com / www.davislighting.com.au