



Installation Instruction

WYNYRD SERIES



- Read all instructions to prevent injury, electric shock or damage due to fire & mechanical hazard
- See product label for supply specifications

STORAGE:


Prior to installation products are to be stored in cool and dry conditions.

APPLICATION:

The installation application and orientation of the product is designed in accordance with the nominated product IP rating, class designation. Installation environments outside these conditions are not recommended. The product is designed to be installed in the horizontal orientation only.

INSTALLATION:


1. Dismantle diffuser from the body and remove LED module tray inside.

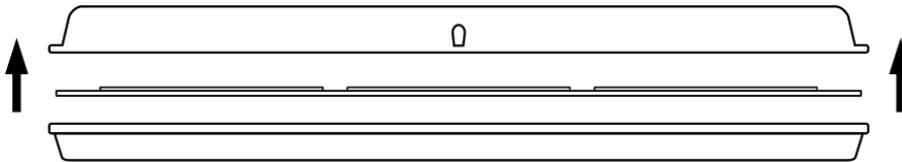


2. Install and screw ceiling mount brackets to the body.




3. Replace plug with cable gland.

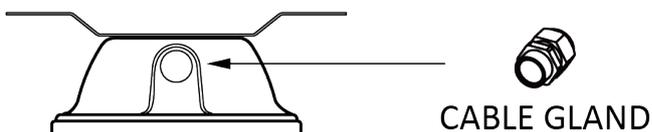


4. Install body to wall/ceiling.

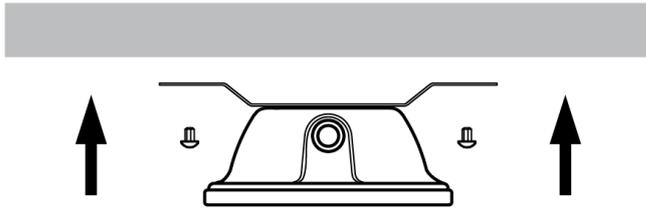

5. Insert incoming supply cable through cable gland and connect incoming supply cable to terminal block.

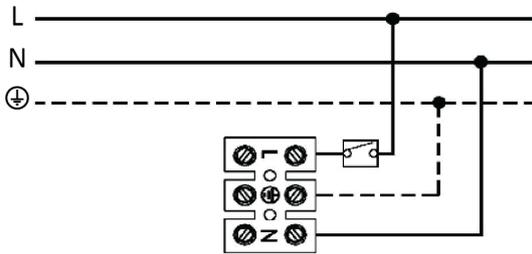

6. Install LED module tray and diffuser to body tighten with screw properly.

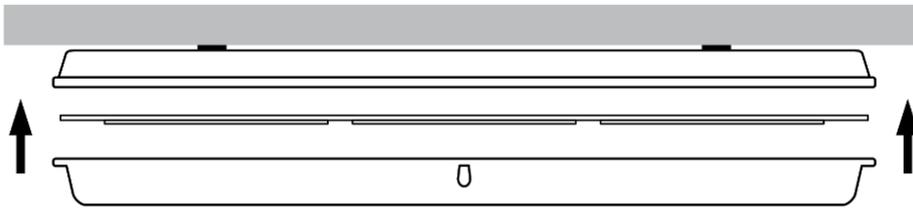

“Do not overtighten diffuser fixing screws or damage may occur – recommended torque setting of 4nm”

CAUTIONS:

- Installation is to be completed by a competent licensed electrician, in accordance with these instructions and relevant local regulations.
- Electronic control equipment must not be subjected to high voltages, DO NOT MEGGER between Live and Neutral.
- All cable/conduit terminations must be installed in accordance with the designated IP rating of this product.
- Suitable installation fastening methods should be employed to ensure the mounting points are not damaged when subjected to vibration and or movement.
- As is the case with all electronic components, it is advisable to fit appropriate surge protection to final sub circuits.
- Choose an installation place capable to withstand 10 times the weight of the product to ensure safety.
- When using glands provided as cord anchorage for flexible cable the cable diameter shall not be less than 8.4 mm and not larger than 12.0 mm.

MAINTENANCE:

The supply must be isolated before opening or accessing the luminaire. Product maintenance is critical to the product designed performance. The product is to be maintained in accordance with the manufacturer's instructions. For the latest product maintenance guides please go to www.davislighting.com. Davis Lighting is not responsible for any product not maintained in accordance with the recommended procedure or intervals. For recommended LAMP / LED maintenance guides, please refer to the lamp installation guidelines supplied with the lamp product or the nominated lamp manufacturer's website. Products supplied with visors or covers must not be operate with a damaged visor or cover; it is recommended damaged visors or covers be replaced by a competent person immediately.

